
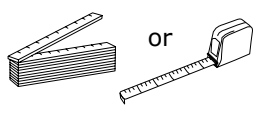
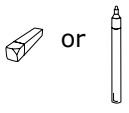
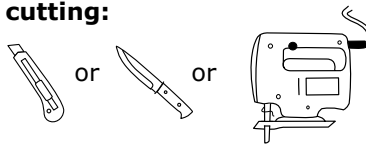
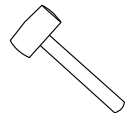
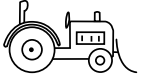
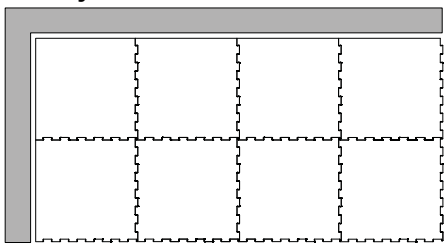
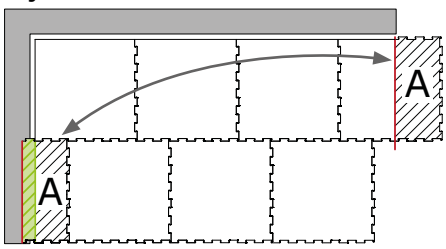
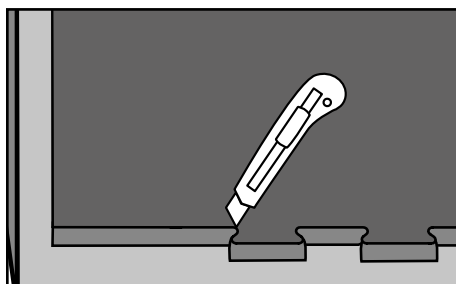


## BELMONDO® Basic, Classic, Trend, Walkway, Walkpro, Paddock

	<p><b>prerequisites:</b></p> <p><b>subsurface:</b></p> <ul style="list-style-type: none"> <li>• paved</li> <li>• clean and dry</li> <li>• no holes</li> <li>• level off uneven areas</li> <li>• maximum 2 % slope (paddock: minimum 1 - maximum 2 %)</li> </ul> <p><b>For wooden floors please consult us!</b></p>	<p><b>mats:</b></p> <p>even temperature: minimum 5° C to maximum 30° C (Store accordingly!)</p>	
<p><b>You will need this:</b></p>			
<p><b>measuring:</b></p> 	<p><b>marking:</b></p> 	<p><b>cutting:</b></p> 	<p><b>connecting puzzle seams:</b></p> 
<p><b>i</b> BELMONDO® mats can versatily be combined at the puzzle seams:</p>		<p><b>! Driving over</b></p> <p>BELMONDO® mats (except Walkway) can be driven on with standard equipment such as farm yard loader or tractor with authorized pneumatic tyres at the recommended inflation pressure up to max. 4 bar. (Notice: drive with due care and steer in large radius!)</p> 	
<p><b>cross joint:</b></p> 		<p><b>T-joint:</b></p>  <p>(leftover pieces can be well utilised)</p>	
<p><b>i</b> To bind fluids (urine) a small amount of absorbent bedding is always required in the loosebox. We also recommend a minimal amount of bedding in the open stable.</p>			
<p><b>! Do not install separation walls, posts etc. upon the mats!</b> (stability is not guaranteed! Do not clamp the mats!)</p>			


### 1 Remove puzzle edges pointing towards the wall




**i tips for cutting:**

- moisten or lubricate the blade lightly
- bend the mats / pull them slightly apart
- possibly lay a board underneath - score - cut


**tip:** use pliers for pulling small pieces apart

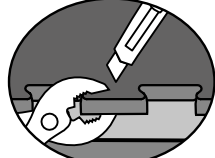

## ② Lay out mats to fit

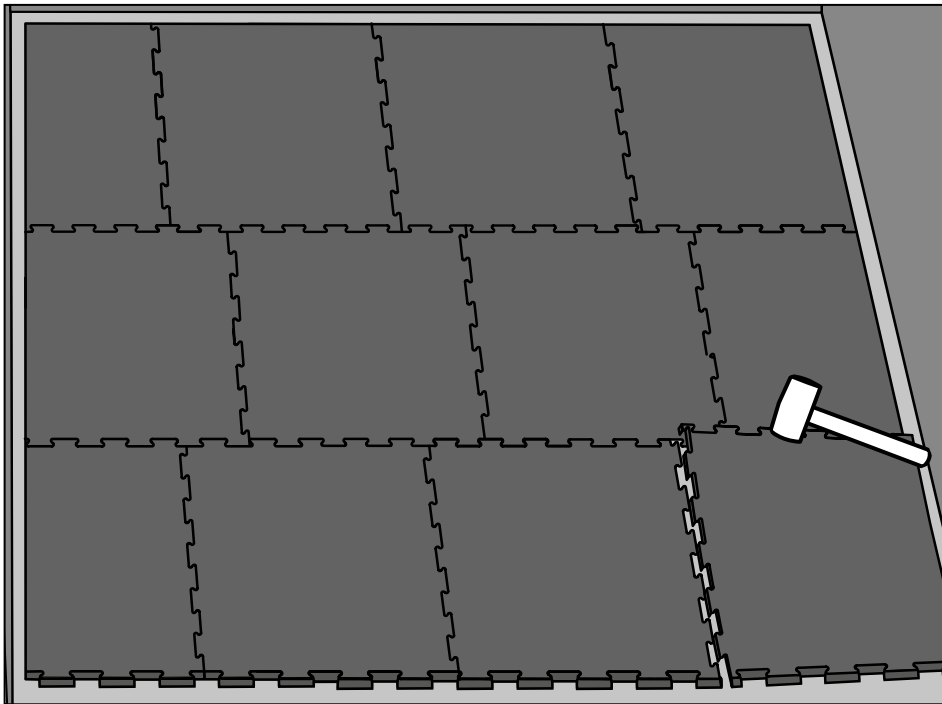

join mats

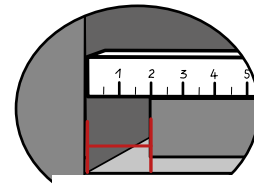

1-2 cm / 2-3 cm

Expansion joint for side boundary:

- 1-2 cm in the inner area
- 2-3 cm in the outdoor area with solar radiation




**tip:**

For heavily used areas (e.g. box entrance) place whole mats (if possible, no puzzle seam!)




**tips for large areas:**



- first draw a straight line 2-3 cm from the edge along the wall/side (e.g. with a chalk line)
- place the mats along the straight line (mats laid out slanted or bent are hard to connect)
- to make the stress free installation even easier, we recommend dividing large areas (100 m<sup>2</sup> and more) evenly and leaving an expansion gap of 2-3 cm at least every 12 m
- we recommend laying in the T-joint pattern

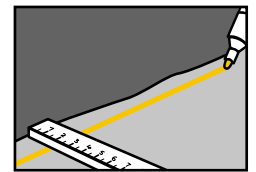

## ③ Adaption

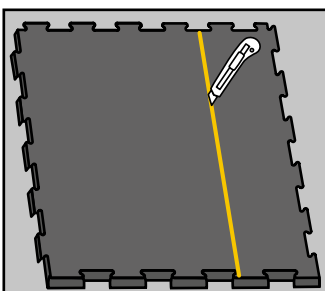

if required cut border mats as needed and fit them together

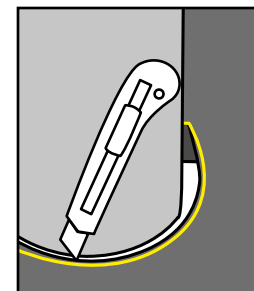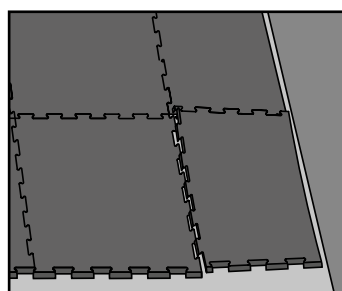

if necessary, cut mats to fit



**tip for areas with smooth subsurface and/or somewhat stronger slope:**

Fasten mats on the floor (e.g. at the upper edge with two fixings per mat), so that the covering will not move through any affecting forces or downhill slope.



Appropriate laying may differ due to local conditions. Therefore the manufacturer is not liable for the laying!