

BELMONDO® Horsewalker P

prerequisites:



subsurface:


- hard/paved (concrete, asphalt, ...)
- clean and dry
- no holes
- level off uneven areas
- maximum 2 % slope

mats:


even temperature:
minimum 5° C to maximum 30° C
(Store accordingly!)

You will need this:


measuring:

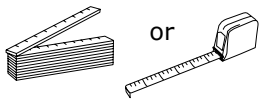


marking:

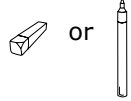

cutting:

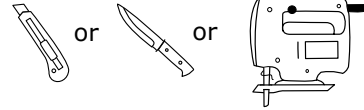


connecting puzzle seams:

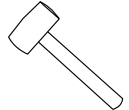

! Driving over


BELMONDO® Horsewalker P can be driven on with standard equipment such as farm yard loader or tractor with authorized pneumatic tyres at the recommended inflation pressure up to max. 4 bar. (Notice: drive with due care and steer in large radius!)

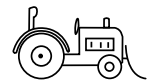

tip: with **new construction** it can be advantageous to lay out the Horsewalker P mats first, then to erect the facility and finally to cut out the pockets around the posts / pillars.

1 Checking width and course of the walking surface and determine mat position


tip: The mats should be placed in a ring shape, with an equal distance (at least 2 cm) to the both the outer and the inner edge

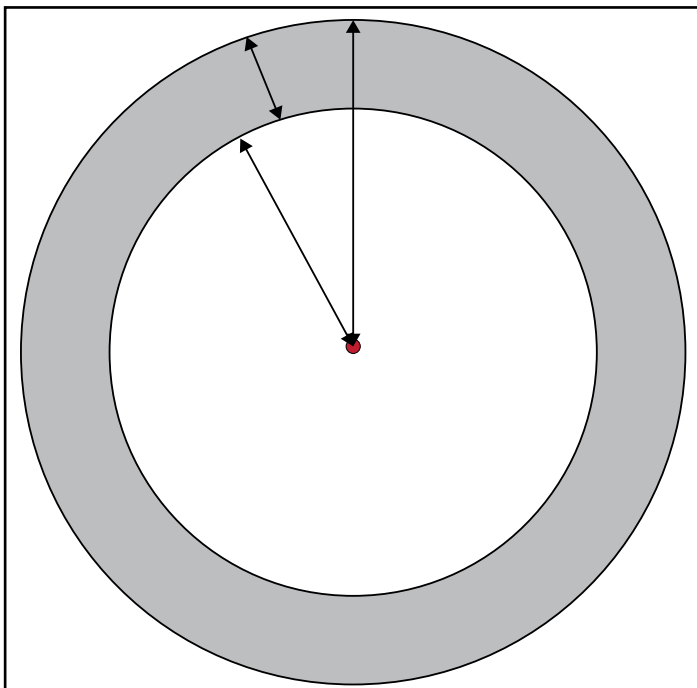

! tip:

- find centre
- starting from centre, measure walking surface (e.g. with a string)
- on the basis of walking surface width and mat length establish equal distances in each case to the outer and inner edge and mark this out evenly all around


mat width

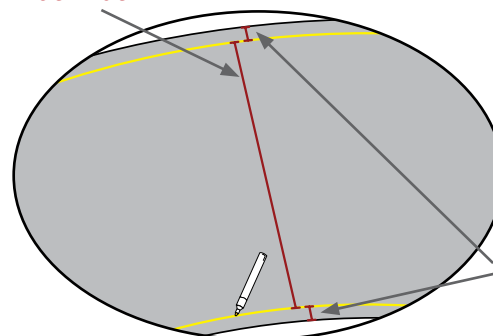

equal distances to the edge (minimum 2 cm)


② Lay out mats

i Start with the first mat at a suitable place:
e.g. first side edge lies against a post / pillar

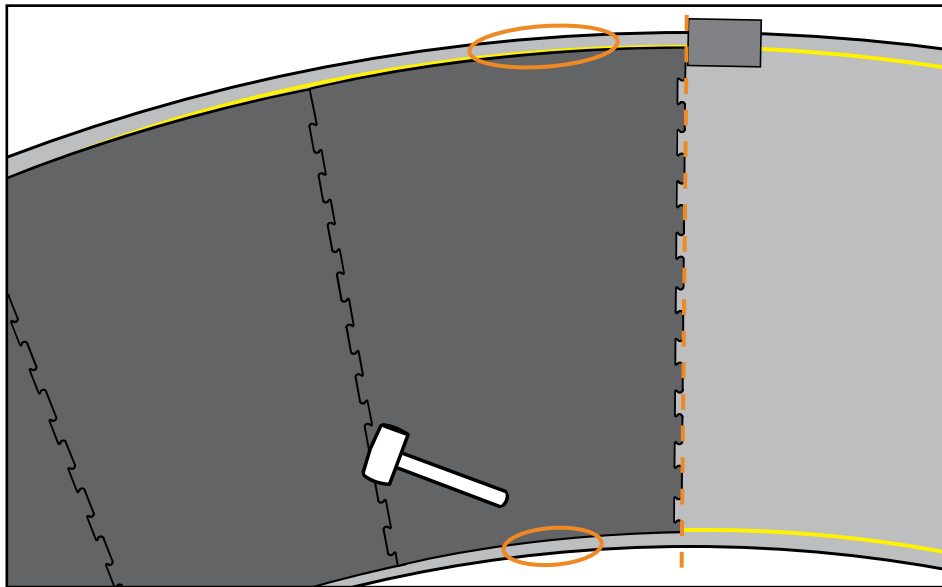


join mats

i tip:
lay out 3 mats first and connect them, then align the distances to the outer and inner edge in order to avoid a skew position of the mat ring

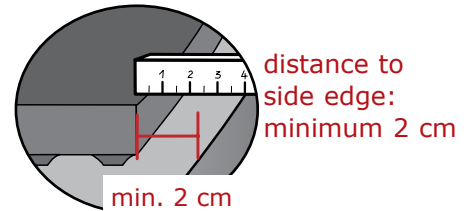

i tip:
For heavily used areas (e.g. entrance) place whole mats (if possible, no puzzle seam!)

③ Adaption

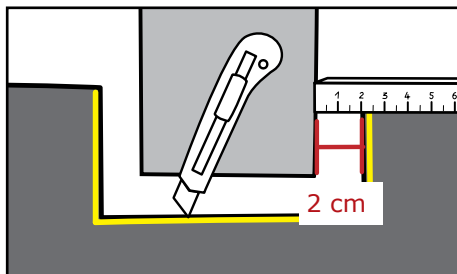


if necessary, cut mats to fit

cut out the pocket 2 cm bigger

i tips for cutting:


- moisten or lubricate the blade lightly
- bend the mats / pull them slightly apart
- possibly lay a board underneath - score - cut

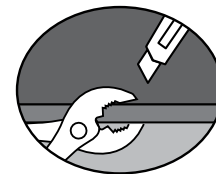

- use pliers for pulling small pieces apart

Facilities without outer boundary:


frame mat ring

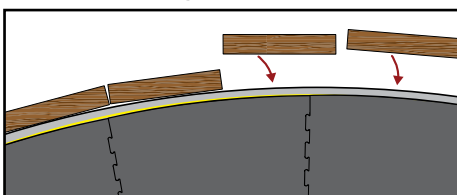

Attach outer boundary (e.g. from wood)

Keep 2 cm distance to outer boundary!

Or: Fasten inner edge

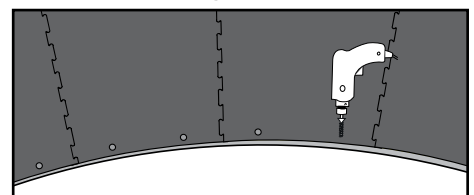

Fasten twice per mat at inner edge

i Appropriate laying may differ due to local conditions. Therefore the manufacturer is not liable for the laying!