

1. General information

KOMFORTEX® Protection is a robust, easy-care and moisture-proof elastic covering that is ideal for wall covering in horse boxes.

High load capacity and excellent resistance against mechanical wear make *KOMFORTEX*® Protection to an "Allrounder" in the range of horse boxes and reduces the risk of injuries to the horses.

In case of the broad range of eye-pleasing colours are individual colour options possible and this elastic covering reduces the impact noise and the ambience.

2. Substrate walls

Make sure that the substrate is leveled, free of dust and free of foreign material (e.g. residual mortar, oil etc.). All types of flooring plasters and also poured asphalt surfaces are suitable substrates.

Minor unevenness can be corrected with a flow able cement-repair compound. Before applying this compound, clean the substrate surface and apply a primer (bonding agent) if necessary to ensure firm bonding.

If the substrate is highly absorbent, coat with a suitable sealant primer.

3. Preparation Work

The walls in horse boxes have to be brushed solid. It must be clean and free of any other pollution before starting to install.

A smooth/uniform leveled surface for wall to be provided.

The elastic layer material is delivered as rolls or sections and should be stored at temperature range of 18°C to 30°C for 24 hours before installation to ensure correct temperature. The ambient temperature for installation should be between 15 °C and 28 °C with relating humidity ranging between 40% to 60%.

At lower ambient temperatures the glue, filling and coating compounds are difficult to process.

4. Installation


After cleaning the surface, and when necessary leveled the substrate, starting with the installation. Apply the glue with a toothed spatula constant on the wall.



After allowing the setting time recommended in the glue manufacturer's instructions, install the **KOMFORTEX®** Protection even at the walls.

It is recommended screwing the material additional to get more position stability. Before installing the next section, make sure that the section installed is properly aligned. Subsequent correction is very difficult.

When installing the sections is extremely careful to position the adjoining edges flush against one another, i.e. such that there are no gaps between the neighboring sections.

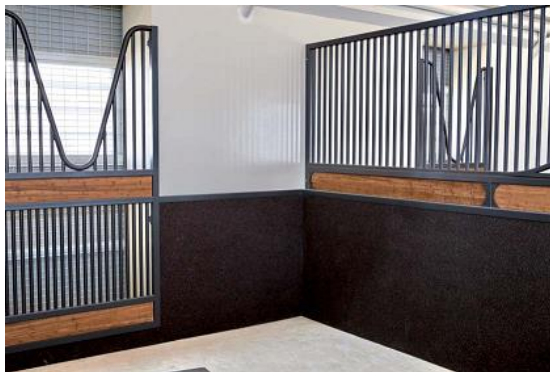

All information without guarantee, subject to change. The Data Sheet is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex

Shortly after installation, i.e. when the glue has begun to set but is not yet completely hardened; apply contact pressure to the layer material surface by a roller to ensure full contact to the substrate.

For installation of *KOMFORTEX*® Protection we recommend to use a 2- component polyurethane glue.